



## How to change the bad Led lamp?

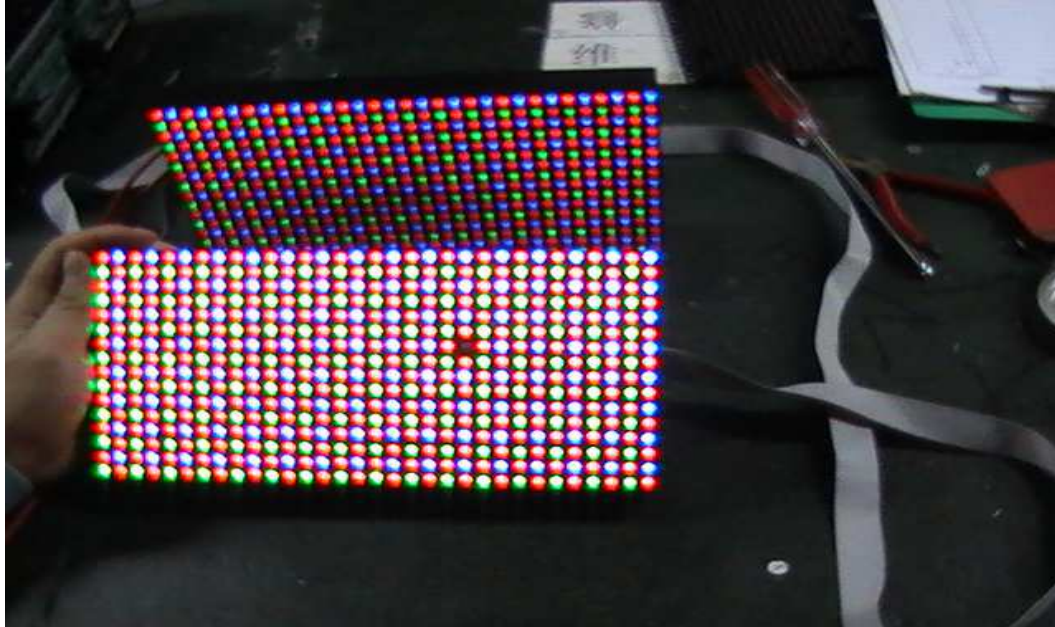


Find the bad lamp

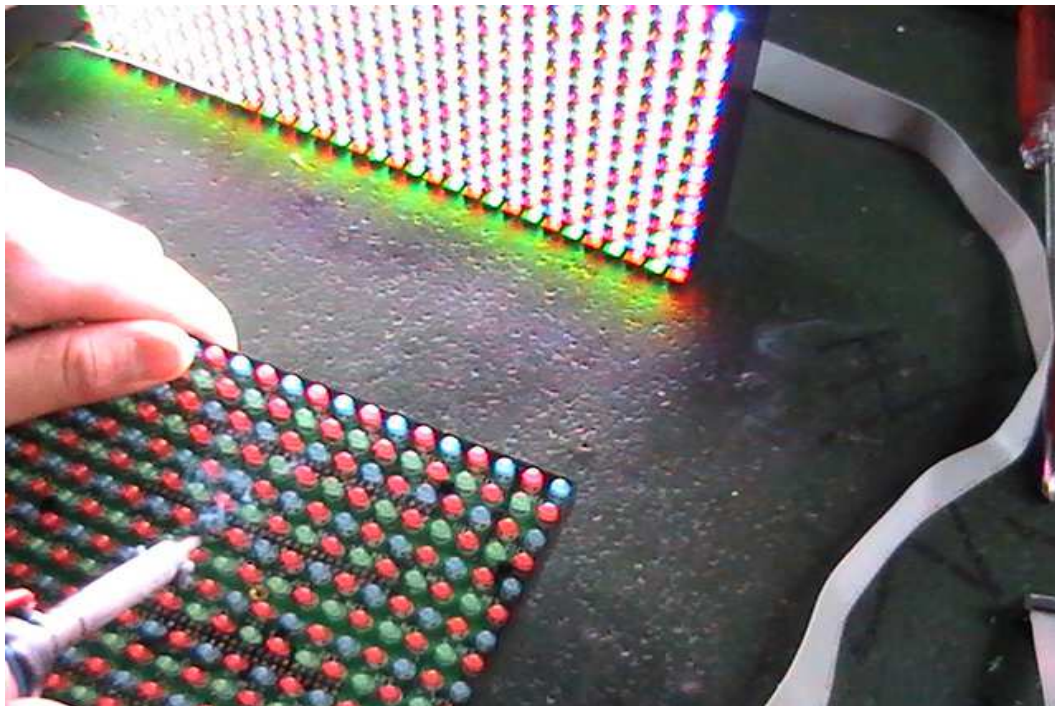


Using the searing-iron to remove the bad lamp (picture 1)



Using the searing-iron to remove the bad lamp (picture 2)

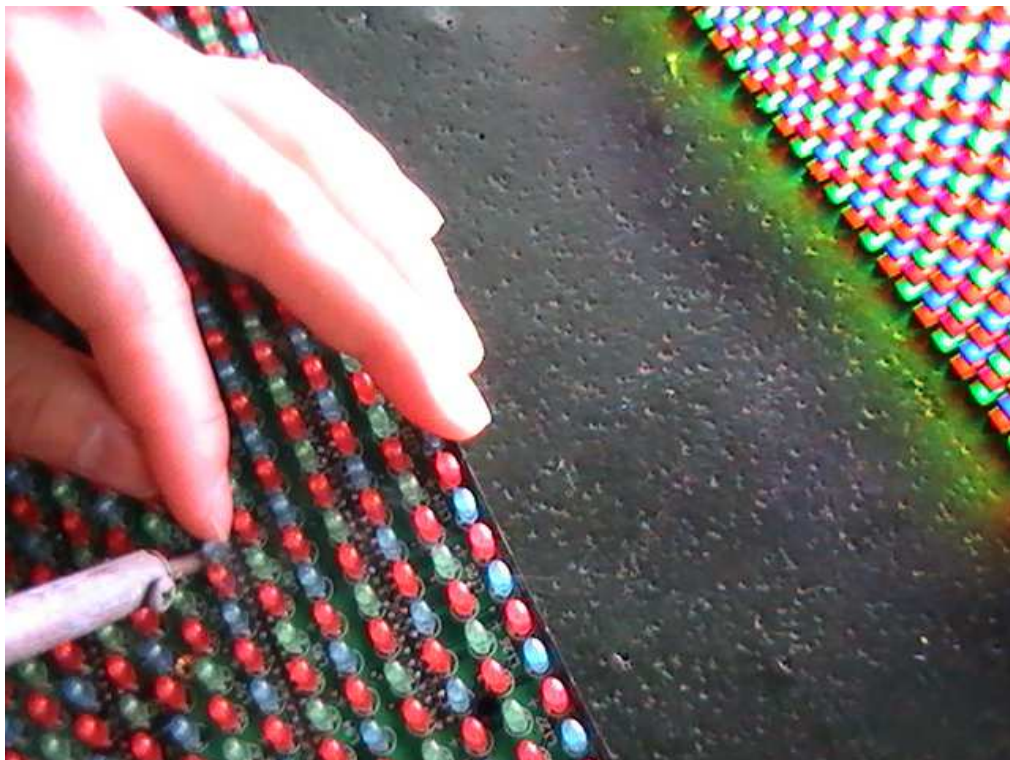

After removing the bad lamp, choose a good one to be instead of it.

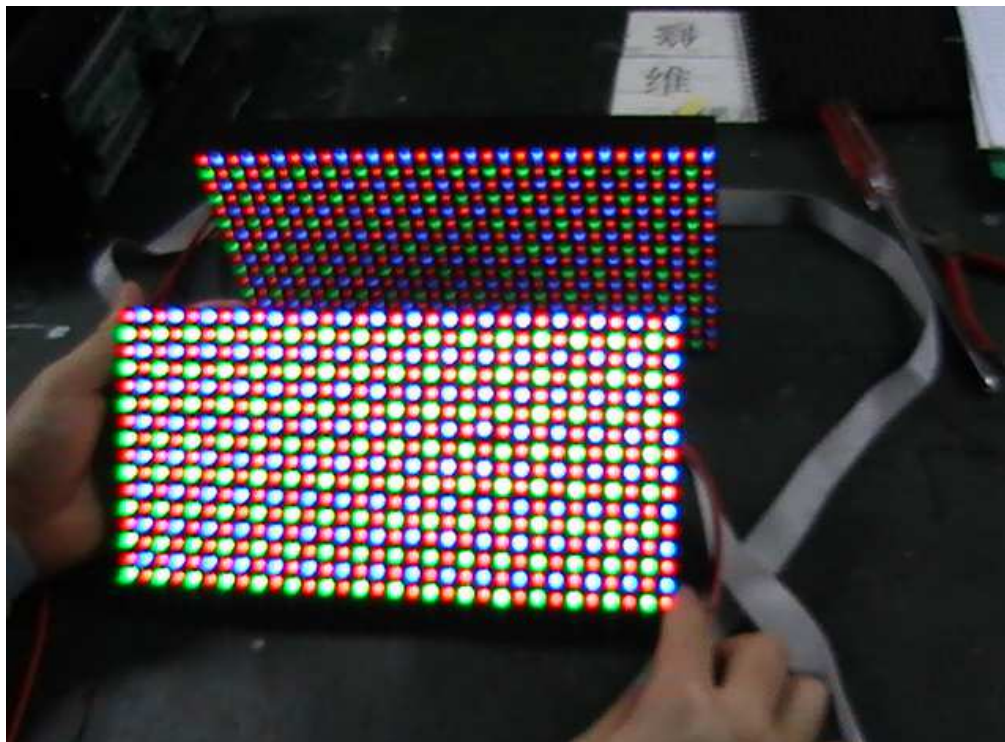

After finishing it, test it.